SIEMENS



RDH10RF

RCR10/433

Wireless room temperature controller with LCD

RDH10RF/SET

Non-programmable, for heating or cooling systems

- Operating modes: Automatic, Comfort, Energy Saving, and Frost Protection
- LCD-Display 50 x 45 (W x H)
- RDH10RF transmitter, battery-powered
- RCR10/433 receiver, mains powered
- Communication of the set is bonded ex factory

The RDH10RF is used to control the room temperature in heating or cooling systems.

Typical applications:


- Homes
- Residential buildings
- Schools
- Offices

The controller can be used together with the following equipment:

- · Thermal valves or zone valves
- Combi boilers
- Gas or oil burners
- Fans
- Pumps

The controller acquires the room temperature with its integrated sensor.

Function diagram

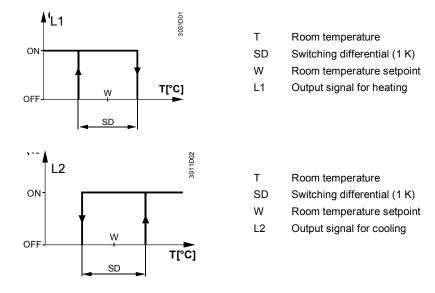

Temperature sensor

The RDH10RF provides room temperature control only.

Display

The digital display displays the actual room temperature and the comfort temperature setpoint. The triangle symbol appears when the heating output is active.



Backup

Setpoints and information required for operating mode changeover are retained when exchanging batteries. The values must be checked though.

Ordering

Please provide the name and product number when ordering: Room temperature controller RDH10RF/SET.

Valves and actuators are to be ordered as separate items.

Equipment combinations

Type of unit	Product number	Data sheet ^{*)}
Electromotoric actuator	SFA21	4863
Electrothermal actuator (for radiator valves)	STA21	4877
Electrothermal actuator (for small valves 2.5 mm)	STP21	4878
2- or 3-port zone valve	MXI/MVI421	4867
Electromotoric actuator for zone valves V146	SUA21	4830
Electric actuator	SUA11/22	4832
Air damper actuator	GDB	4624
Air damper actuator	GSD/GQD	4606
Air damper actuator	GXD	4622


*) The documents can be downloaded from http://siemens.com/bt/download.

Building Technologies

The controller consists of 4 parts:


- Plastic housing with digital display accommodating the electronics, operating elements and built-in room temperature sensor
- Baseplate (mounting base)
- Removable battery compartment
- Fold-out stand

The housing engages in the baseplate and snaps on. There is a reset button on the rear of the unit.

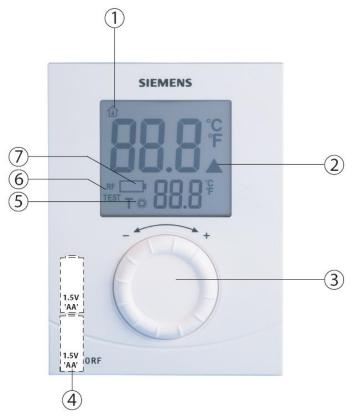


Key

- 1 Room temperature display in °C
- 2 A Indicates a heat request
- 3 Temperature setting knob
- 4 Battery compartment
- 5 TOC Comfort temperature setpoint
- 6 RF
 - TEST Indicates RF signal test
- 7 Indicates low battery power; replace batteries

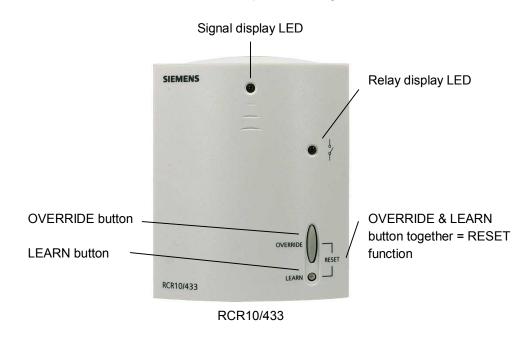

The RCR10/433 receiver is located in a plastic housing with LEDs and buttons.


The RDH10RF is located in a plastic housing. Two buttons are visible on the rear side when removing the baseplate.

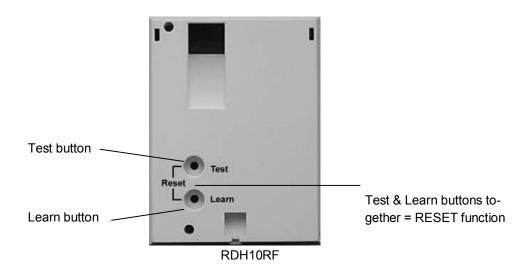

Mount the room temperature controller in a location where the air temperature can be measured as accurately as possible without being adversely affected by direct solar radiation or other sources of heat or cooling.

The controller is delivered with a fold-out stand and may be used as a "mobile" device (Note: Pay attention to mounting location).

Mounting height is approximately 1.5 m above the floor.

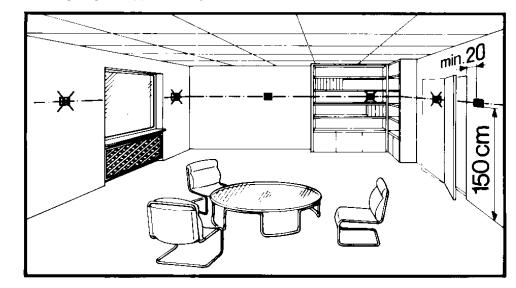

The unit can be fitted to a recessed conduit box.

Mounting, installation and commissioning	Fix the baseplate prior to mounting the controller. The receiver does not require a baseplate. Connect the electrical connections and fit and secure the receiver in compliance with local regulations (also refer to the separate mounting instructions).Mount the controller on a flat wall.If there are thermostatic radiator valves in the reference room, set them to their fully open position.		
	For commissioning please refer to the Operating Instruction CE1B3070xx		
Maintenance	Controller and receiver are maintenance-free except for the controller battery.		
Change of batteries	If battery symbol 📋 appears, the batteries are almost empty and must be replaced.		
Reset	Simultaneously press the TEST and LEARN buttons on the rear side of the controller to reset it (reset function). Simultaneously press the OVERRIDE and LEARN buttons to reset the receiver (reset function).		
	All individual settings are reset to the default values.		

OVERRIDE	Override allows for temporarily overwriting the active value from the sender. Over- ride responds differently depending on the radio connection (normal or fault).		
	Example A: Normal connection between sender and recipient Press the OVERRIDE button to overwrite the value for ca. 14 minutes. The value then returns to the setpoint.		
	Example B: Faulty connetion between sender and recipient		
	Press the OVERRIDE button to permanently overwrite the value. The value re- turns to the setpoint after the connection between sender and recipient works again.		
RF LED	RF state	RF LED	
	Power up (First 5 seconds)	Flash RED + GREEN (Amber)	
		(5 seconds)	
	Power up (After 5 seconds)	RED	
	Press OVERRIDE switch	Flash RED + GREEN (Amber)	
		(5 seconds)	
	Learning period	No LED	
	Software reset	RED	
	RF receive	GREEN	
	No RF within last 25 minutes	RED	
	Manual override	Flash GREEN	
	(RF receive)		
	Manual override	Flash RED	
	(No RF receive)		
Relay LED	Relay state	Relay LED	
	From OUT to ON (First 5 seconds)	Flash YELLOW	
	ON	YELLOW	
	From ON to OFF (After 5 seconds)	Flash YELLOW	
	OFF	OFF	

Disposal



The devices are considered electronics devices for disposal in term of European Directive 2012/19/EU and may not be disposed of as domestic waste.


- Dispose of the device via the channels provided for this purpose
- Comply with all local and currently applicable laws and regulations.
- Dispose of empty batteries at designated collection points.

Technical data


Power supply	Operating voltage	DC 3 V (2 x 1.5 V AA alkaline batteries)
	Battery life	>1 year (AA alkaline batteries)
Sensor inputs	Internal:	
	Thermistor	10 kΩ ± 1% at 25 °C
Operational data	Switching differential SD	1 K (fixed)
	Setpoint setting range	530 °C
	Factory setting comfort setpoint Resolution of settings and displays	20 °C
	Setpoints	0.5 °C
	Actual value displays	0.5 °C
Environmental conditions	Operation	IEC 60721-3-3
	Climatic conditions	Class 3K5
	Temperature	0+40 °C
	Humidity	<90% r.h.
	Transport	IEC 60721-3-2
	Climatic conditions	Class 2K3
	Temperature	-25…+60 °C
	Humidity	<95% r.h.
	Mechanical conditions	Class 2M2
	Storage	IEC 60721-3-1
	Climatic conditions	Class 1K3
	Temperature	-10…+60 °C
	Humidity	<90% r. h.
Standards	EU Conformity (CE)	CE1T10886xx *)
	C-tick conformity to	
	Test standards and requirements	EN 61000-6-3, AS/NZS 4251.1
	Test standards for radio equipment	AS/NZS 4268
	Safety class	III as per EN 60950-1
	Pollution degree	2
	Degree of protection of housing	IP20
General	Weight (incl. package)	
	RDH10RF/SET	515 g
	Color of housing front	Signal-white RAL 9003
	Housing material	ABS (LCD lens: PC)

Receiver RCR10/433


General unit data	Operating voltage	AC 230 V +10/–15%
	Power	<10 VA
	Frequency	5060 Hz
	Switching capacity of relays	
	Voltage	AC 24250 V
	Current	8 (3) A
Outputs	Relay contacts	
Switching outputs	Switching voltage	Max. AC 250 V
(LX, L1, L2)		Min. AC 24 V
	Switching current	Max. 8 A res., 3 A ind.
	At AC 250 V	Min. 200 mA
	Contact life at AC 250 V	Guide value:
	At 5 A res.	1 x 10⁵ cycles
	Insulating strength	
	Between relay contacts and coil	AC 5,000 V
	Between relay contacts (same pole)	AC 2,500 V
Electrical connections	Connection terminals	Screw terminals
	For solid wires	2 x 1.5 mm ²
	For stranded wires	1 x 2.5 mm ² (min. 0.5 mm ²)
Environmental conditions	Operation	IEC 60 721-3
	Climatic conditions	Class 3K3
	Temperature	0+45 °C
	Humidity	<85% r.h.
	Storage and transport	IEC 60 721-3
	Climatic conditions	Class 2K3
	Temperature	−25+70 °C
	Humidity	<93% r.h.
	Mechanical conditions	Class 2M2
Standards	EU Conformity (CE)	CE1T10886xx *)
	Safety class	II as per EN 60 730-1
	Degree of pollution	2
	Color	
	Unit front	Signal-white RAL 9003
	Base	Gray RAL 7035
	Dimensions	83x104x32 mm
	*) The documents can be downloaded from http://sier	mens.com/bt/download.

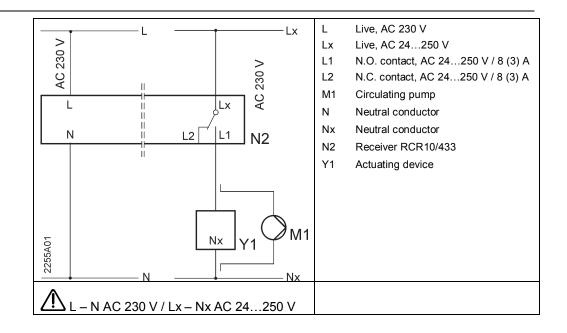

Application examples

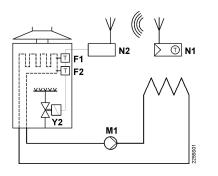


Wireless room temperature controller with receiver control of a gas-fired wall-hung boiler

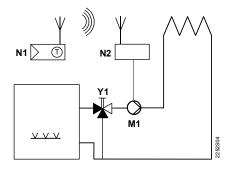

Wireless room temperature controller with receiver control of a heating circuit pump (precontrol by manual mixing valve)

at
a

- F2 Safety limit thermostat
- M1 Circulating pump

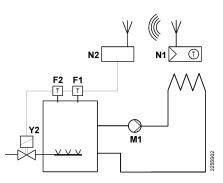

Wireless room temperature controller with receiver control of atmospheric gas burner




Wireless room temperature controller with receiver control of cooling equipment

- E1 Cooling equipment
- N1 Room temperature controller RDH10RF
- N2 Receiver RCR10/433
- Y1 3-port valve with manual adjustment
- Y2 Magnetic valve

Dimensions


Room temperature controller

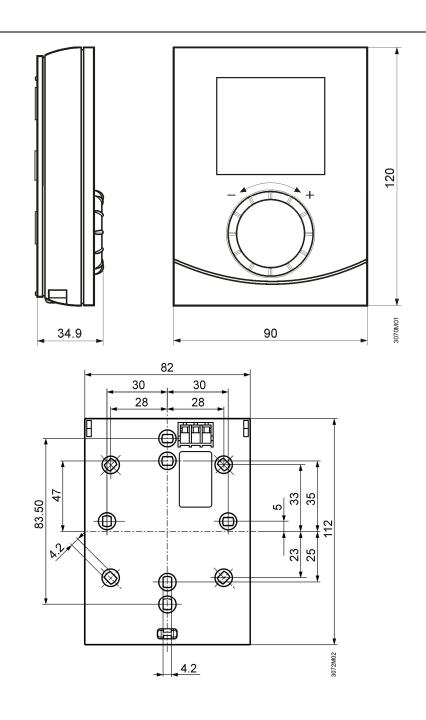

Room temperature controller mounting plate

 
Room temperature controller with foldout stand





104

32

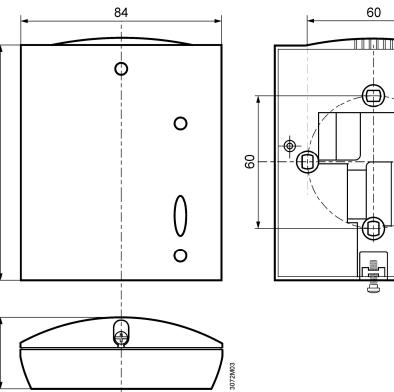

Subject to change

۲

€