


de Montageanleitung
en Mounting instructions
fr Instructions de montage
sv Monteringsinstruktion
nl Montage-handleiding
it Istruzioni di montaggio
fi Asennusohje
es Instrucciones de montaje
da Monteringsvejledning
pl Instrukcja montażu
cz Montážní návod
hu Szerelési útmutató
el Οδηγίες εγκατάστασης
zh 安裝指導


Stellantriebe
Actuators
Servomoteur
Ställdon
Servomotoren
Servocomandi
Toimimoottorit
Actuadores
Motorer
Siłowniki
Pohony
Motorok
Κινητήρες
执行器

SFA21/18
SFA71/18
SFA11U
SFP21/18
SFP71/18


1

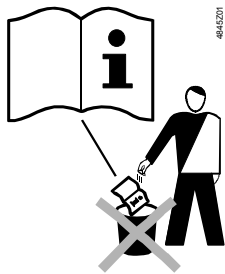

2

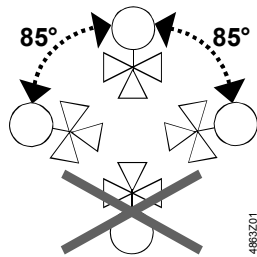


3

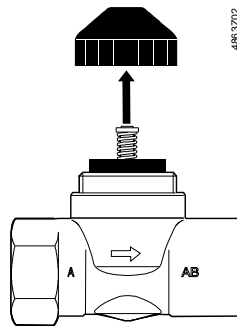

SFA... VVI46..
 VXI46..
 VVS46..
 VXS46..


4

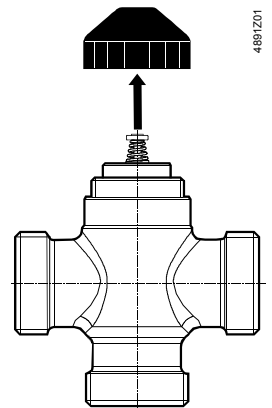

SFP... VVP47..
 VXP47..
 VMP47..


5

SFA...

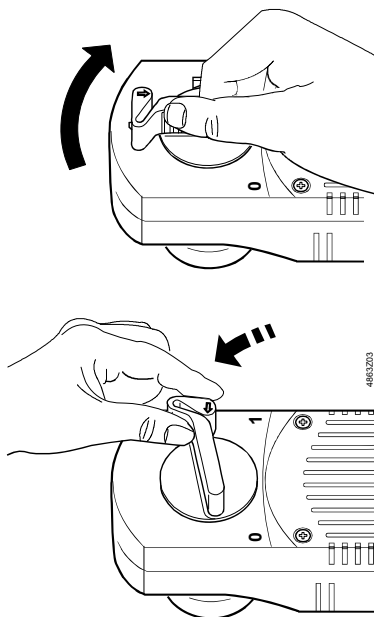


5

a

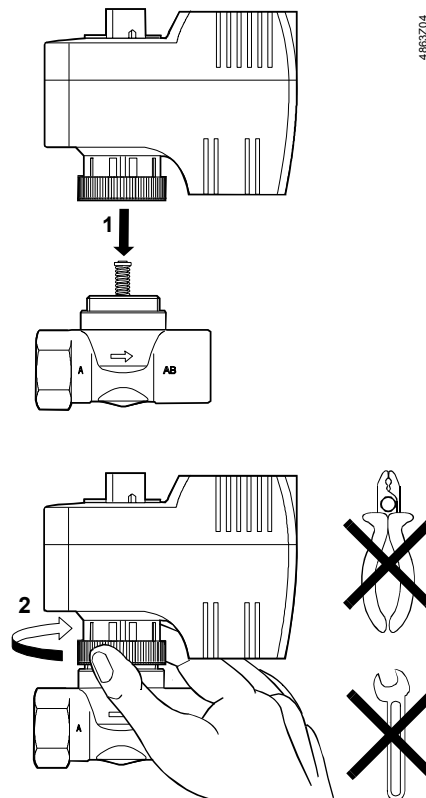


5

b

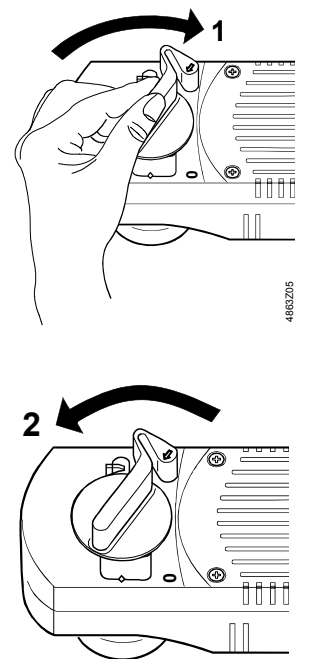


6 SFP...

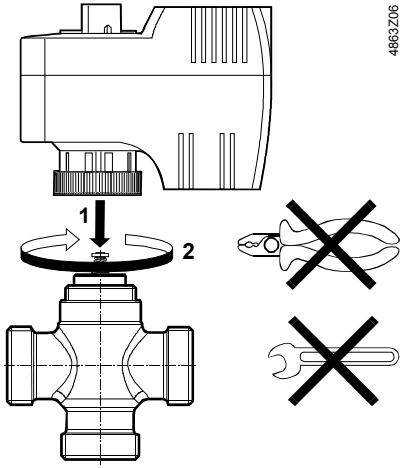


4863Z06

7

 
SFA21/18
SFP21/18
AC 230 V




SFA71/18
SFP71/18
AC 24 V

 

SFA11U
AC 120 V

 


ASC2.1/18

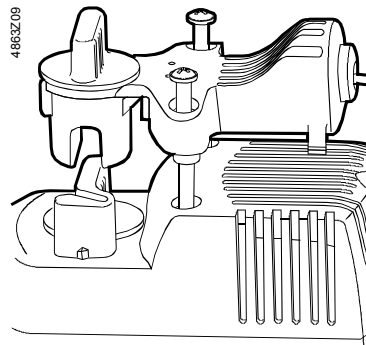

4863Z09



max. AC 250 V
max. 3 (2) A

4863Z09

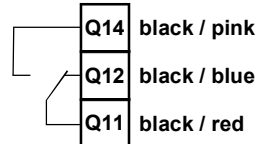



0 ... 50 % : Q11 → Q12
50 % ... 1 : Q11 → Q14

SFA.. SFP..

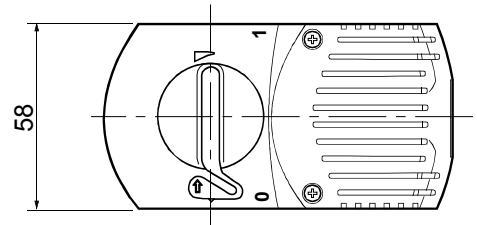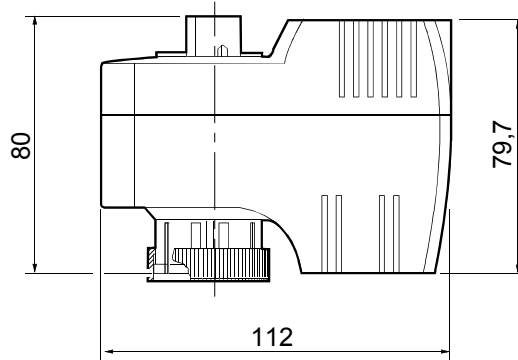

4863M01

SFA.. + ASC2.1/18 SFP.. + ASC2.1/18

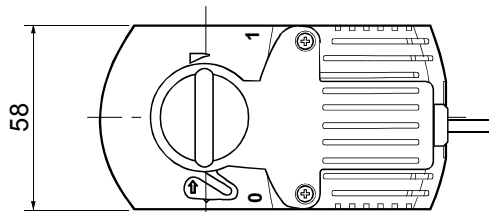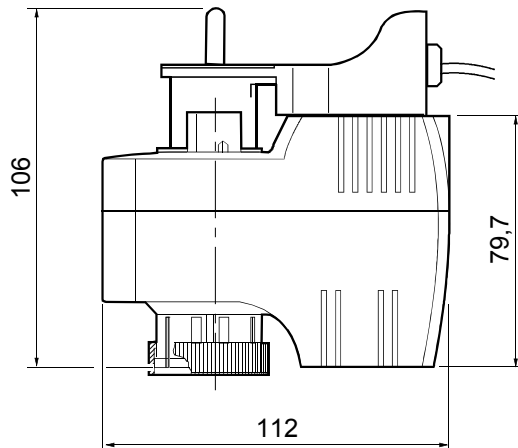

4863M02