

AP 420/3 IR wall switch, single, titanium white

5WG1 420-3AB13

Product and Applications Description



The AP 420/3 IR wall switch in the design DELTA style is available with the color titanium white and with a black cover over the IR diodes.

For wireless control of actuators the AP 420/3 IR wall switch transmits IR signals that are received by the S 450 IR receiver decoder or a wall switch with IR receiver-decoder, which transposes them into corresponding bus telegrams. Thus the IR wall switch can send e.g. commands to actuators for defined on/off switching or dimming of lamps, or for moving Venetian blinds up/down or moving their slats.

The IR wall switch is powered by two batteries of type Alkaline (LR03/AAA; 1,5V).


Note

The batteries (Alkaline LR03/AAA, 1,5V) are not included and have to be sourced separately.

Application programs

none

Example of Operation

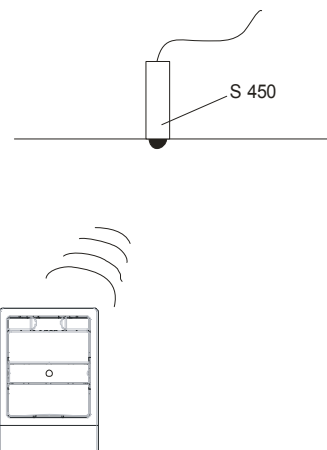

Installation notes



WARNING

- The device must be mounted and commissioned by an authorised electrician.
- The prevailing safety rules must be heeded.
- For planning and construction of electric installations, the relevant guidelines, regulations and standards of the respective country are to be considered.

Technical Specifications

Power supply

two batteries Alkaline LR03/AAA, 1,5V

IR transmission unit

- light wave length: 890 nm
- transmission freq.: 455 kHz
- transmission range:
(the receiver must be within uninterrupted optical reach)
 - black LED cover: approx. 8 m unfocused
- adjustable channels: 1 of 64

Configuration elements

for channel selection:

slide switches (built in the device), access is possible after removing the bottom part

Operating elements

- 2 facing rockers

Display elements

- 1 red LED:
LED for transmission and battery observance
flashing on rocker depression

Mechanical data

- Housing: plastic
- dimensions (W x H x D): 82 x 115 x 21mm
- weight: approx. 80 g (without battery)
- Fire load: approx. 3040 kJ ± 10 %

Electrical safety

- Degree of pollution (according to IEC 60664-1): 2
- Type of protection (according to EN 60529): IP 20

Reliability

Failure rate: 170 fit at 40°C

EMC requirements

- complies with EN 50090-2-2, EN 61000-6-2

Environmental specifications

- climatic conditions: EN 50090-2-2
- ambient temperature operating: - 5 ... + 45 °C
- ambient temperature non-op.: - 25 ... + 70 °C
- relative humidity (non-condensing): 5 % to 93 %

Markings: CE

CE mark

- in accordance with the EMC directive (residential, commercial, and industrial buildings)

Location and Function of the Display and Operating Elements

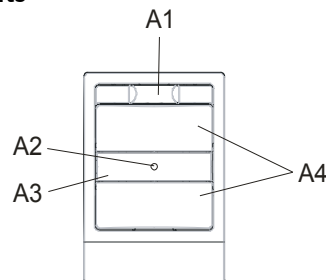


Figure 1. Display and operating elements

- A1 IR transmission diodes
- A2 LED for transmission and battery observance
flashing on rocker depression;
no display when depressing rocker: replace battery
- A3 label field
- A4 rocker switch
top depression (1) = ON/UP/BRIGHTER
bottom depression (0) = OFF/DOWN/DARKER

Battery change

The LED flashes for five seconds after a rocker has been depressed if a battery change is required.

- Dismount the wall switch
- Remove the empty batteries and replace these with new batteries (Alkaline LR03/AAA, 1,5V)

NOTE:
Obey the applicable regulations when disposing the empty batteries.



- Mount the wall switch

NOTE:

If within two seconds after inserting the batteries the button below the SIEMENS logo is pressed for five seconds, the wall switch is set to send IR signals immediately when a button is pressed. In conjunction with the new S 450 IR receiver decoder switching and dimming commands can be issued faster by the remote. This setting is active until the next battery change.

AP 420/3 IR wall switch, single, titanium white

5WG1 420-3AB13

Mounting and wiring

Mounting notes

- Take care that the line of sight from the transmission diodes to the receiver is sufficiently free. Especially, if persons are standing in front of the device in order to use it.
- The base plate of the IR-transmitter can be mounted with screws or optionally with the included double faced adhesive film.

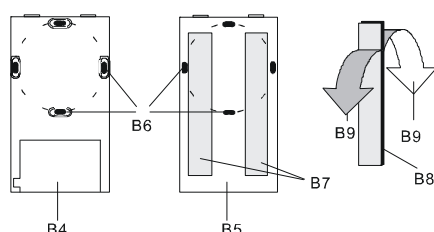


Figure 2a

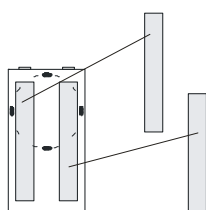


Figure 2b

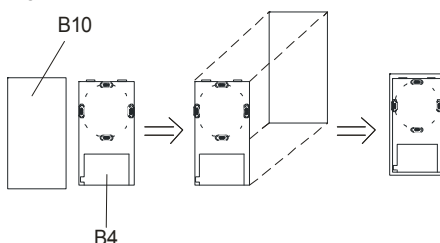


Figure 2c

- B1 IR wall switch
- B2 latching screw
- B3 interlocking clamps
- B4 base plate, front view
- B5 base plate, rear view
- B6 horizontal/vertical long slots
- B7 recesses for adhesive tape
- B8 double faced adhesive tape
- B9 protective films
- B10 Non-transparent foil (for mounting on transparent material)
- B11 Label
- B12 Slide switches for selection of the IR transmission channel

B13 battery compartment AAA

Mounting of the base plate (Figure 2)
with screws

- Pierce the horizontal or vertical holes (B6) of the base panel (B4) with a screw-driver or another suitable tool.
- Attach the base panel (B4) with screws respectively with dowels and screws.

with double faced adhesive tape

- Remove one of the protection films (B9) from the double-faced adhesive tape (B8) and stick the tape in the recesses (B7) on the device's back side.
- Strip off the remaining protection films (B9) and push the base panel onto a smooth, dustless and greaseless foundation or the non-transparent foil.
- When installing on transparent material (e.g. glass) stick the transparent foil (B10) on the transparent material.

Mounting the IR wall switch (Figure 3)

- Insert the batteries into the wall switch (B1)
- Select the desired IR transmission channel with the sliding switches (B12) on the rear side of the wall switch (B1).
- Hang the device onto the base panel with its upper side and click it into place at the retaining clamps with its bottom side to attach the device on the base panel.
- Secure the wall switch with the included latching screw (B2) against unintentional dismounting.

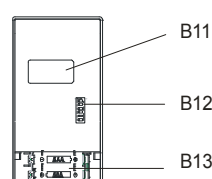


Figure 3a

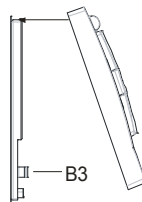


Figure 3b




Figure 3c

AP 420/3 IR wall switch, single, titanium white

5WG1 420-3AB13

Dismounting the IR wall switch (Figure 4)

- Unscrew the latching screw (B2) on the bottom side of the wall switch (B1).
- Insert the screw driver below the screw hole for the latching screw, detach the wall switch from the base plate by swiveling the screw driver up and lift the wall switch from the base plate.

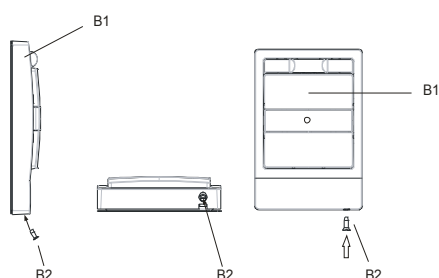


Figure 4

Select IR transmission channel

The AP 420/3 IR wall switch uses one channel for transmitting the IR signals. A maximum of 64 channels are available.

The transmission channel is selected with the sliding switches 1 to 6 (figure 5) that are on the rear side of the device (B12).




Figure 5

Channel assignment dependent on the sliding switch positions

channel	slide switch					
	1	2	3	4	5	6
0	0	0	0	0	0	0
1	0	0	0	0	0	1
2	0	0	0	0	1	0
3	0	0	0	0	1	1
4	0	0	0	1	0	0
5	0	0	0	1	0	1
6	0	0	0	1	1	0
7	0	0	0	1	1	1
8	0	0	1	0	0	0
:						
61	1	1	1	1	0	1
62	1	1	1	1	1	0
63	1	1	1	1	1	1

Dimension drawing

Dimensions in mm

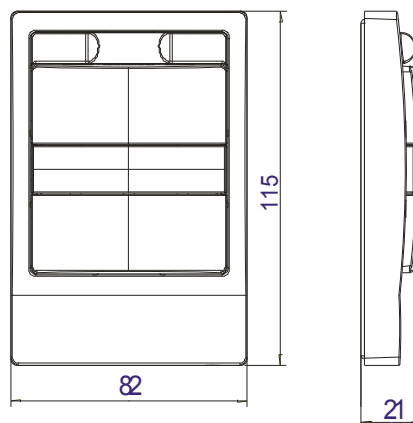**General Notes**

- The operating instructions must be handed over to the client.
- Any faulty devices should be returned to the local Siemens office.
- If you have further questions concerning the product please contact our technical support:

+49 (0) 180 50 50-222

(0,14 €/min. from the German landline network, deviating mobile communications prices are possible)

+49 (0) 180 50 50-223

E-Mail: support.automation@siemens.com

www.siemens.com/automation/support-request